


Rigging Guide SSR


1. With the sail flat on the ground, zips upward slide mast into the mastsleeve above the cams and battens

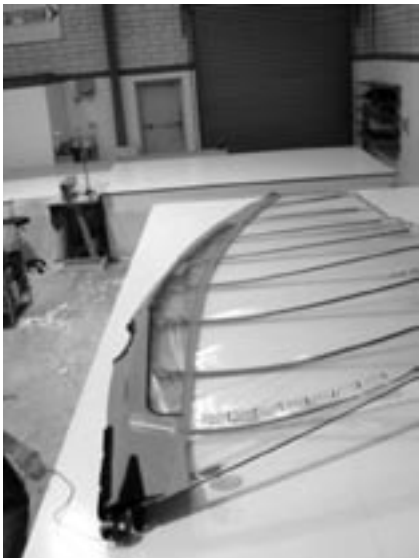

2. Downhaul the sail sufficiently so that the boom can be attached.



3. Outhaul the sail to 5cm less than the recommended setting.

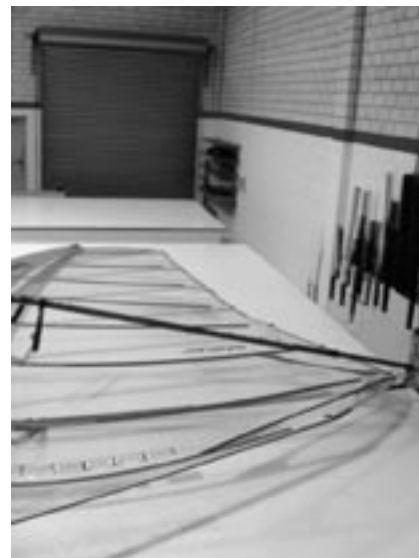


4. Release downhaul tension.




5. Setting the cams onto the mast:

Using direct hand pressure on the batten inside the mast sleeve (access via zips or boom slot) push down on the batten while applying upward pressure from the underside of the mast sleeve to seat the cam on the mast. Do not force the cams on the mast. If they do not go on easily ensure downhaul has been released.

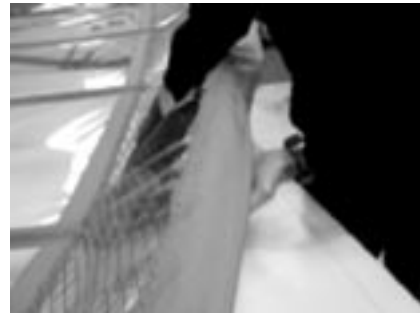

6. Fully tension the down haul and outhaul

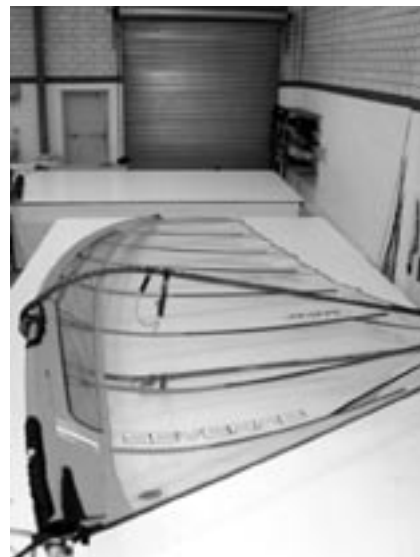

De-rigging.

1. Release 20cm of downhaul tension.
2. Release 10cm of outhaul tension.
3. Access the cams and press down to release them from the mast.
4. Release the outhaul tension and remove the boom.
5. Release the remaining downhaul tension and remove the mast from the sleeve

Trouble shooting

The cams are very difficult to get on the mast. Reduce downhaul tension. The cams pop of the mast while rigging Increase downhaul tension.
 Boom difficult to take of mast while de-rigging.
 Re-apply 10cm of downhaul.

1. Roll out the sail and thread the mast into the sleeve.
 (Tread directly onto the cams if the sail is a C2)



2. Downhaul the sail to the recommended setting.



3. Attach the boom and outhaul the sail to the recommended setting.